

6-3. Initialization

Items to initialize

The following items must be initialized for normal system operation in cases such as after the battery is reconnected, or maintenance is performed on the vehicle.

Item	When to initialize	Reference
Engine oil maintenance data	After changing engine oil	P. 502
Tire inflation pressure warning system	<ul style="list-style-type: none">• When tire pressure sensors are replaced• When driving with the tires inflated to a higher than standard tire pressure	P. 511